 


CONIA

CL1901HDVDR

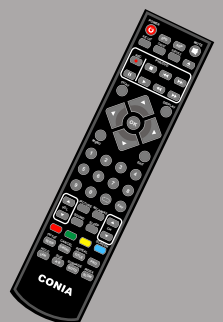

19 LCD TV

Instruction Manual

Contents

Caution	1
Safety Information	2
<hr/>	
Accessories	3
Technical Specification	3
<hr/>	
Product Introduction	4
Front View	4
Rear View	4
<hr/>	
Connections	5
<hr/>	
Remote Control	6-7
<hr/>	
Basic Operation	8
<hr/>	
OSD Menu	9-15
1. CHANNEL menu	9
2. PICTURE menu	11
3. SOUND menu	12
4. TIME menu	13
5. OPTION menu	14
6. LOCK menu	15
<hr/>	
Multimedia Operation	16-18
Recording Operation	19-21
<hr/>	
DVD Operation	22-25
1. DVD Basic Operation	22-23
2. Disc Care	23
3. DVD System Setup	24-25
<hr/>	
Simple Troubleshooting	26
<hr/>	
IMPORTANT NOTICE	27

Caution



The lightening flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated “dangerous voltage” within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Correct disposal of this Product

 
(Waste Electrical & Electronic Equipment (WEEE))

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/ recycling centre.

In the USA there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

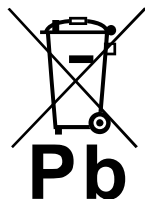

This unit complies with European safety and electrical interference directives.

Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

 
Electrical safety

- The TV set should only be connected to a mains supply which matches that stated on the label on the mains adaptor.
 - To prevent overload, don't share the same mains supply socket with too many other items of equipment.
 - Do not place any connecting wires where they may be stepped on or tripped over.
 - Do not place heavy items on the leads, which may damage them.
 - Hold the Mains plug, not the wires, when removing from a socket.
 - During a thunderstorm or while leaving the TV for long periods, disconnect the aerial (if outdoor) and mains adaptor from the supply.
 - Do not allow water or moisture to enter the TV or mains adaptor. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.
 - Pull the plug out immediately, and seek professional help if:
 - the mains plug or cable is damaged.
 - liquid is spilt onto the set, or if it is accidentally exposed to water or moisture.
 - anything accidentally penetrates the ventilation slots.
 - the set does not work normally.
 - Do NOT remove the safety covers. There are no user serviceable parts inside. You may invalidate the warranty. Qualified personnel only are permitted to service this apparatus.
 - To avoid battery leakage, remove exhausted batteries from the remote control handset, or when not using for a long period.
 - Do NOT break open or throw exhausted batteries on a fire.
-

Physical safety

- Do NOT block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around the unit.
- Do NOT tap or shake the TV screen, you may damage the internal circuitry. Take good care of the remote control, do not drop it or allow it to come into contact with liquids.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp soft cloth with diluted detergent.

Accessories



User's Manual



 
Remote control



Mains adaptor



Mains cable



Batteries

* Note: The configuration of the components may look different from the following illustration

Technical Specification


- TV System	PAL BG/DK/I SECAM BG/DK
- Screen Size	47 cm(diagonal)
- Resolution	1366x768
- Aerial input	75 Ω (unbalanced)
- Audio output power	2x3W
- Power Consumption	DC 12V \Rightarrow 5A 60W

Remote Control

Type	infrared
Control distance	5m
Control angle	30° (horizontal)
Batteries	2 x 1.5V, size AAA

Product Introduction

 Front View

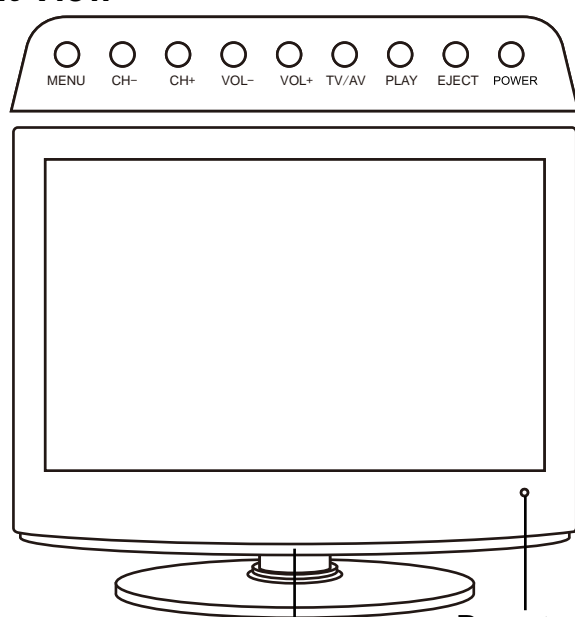

Insert a 12cm disc according to the silk.

MENU: Display/exit the OSD menu.
CH+/-: Scan through channels.
VOL+/-: Adjust the volume.
TV/AV: Display the input source menu.
EJECT: Press the key to eject the disc.
PLAY: Press the key to play/pause the DVD.
POWER: Turn on/standby the TV set.

LED indicator

Remote Control window(keep clear)

(IR) Infrared Receiver: Receives IR signals from the remote control.

(Power on/Standby) LED indicator: Press **POWER** to turn on and off.

Indicator on(Red)

 
Standby mode

Indicator on(Green)

Power on mode

The effective receiving range for the signal is 5-8 metres from the front of the remote control window, and 30° to the left or right side and 20° above or below the control window.

Rear View

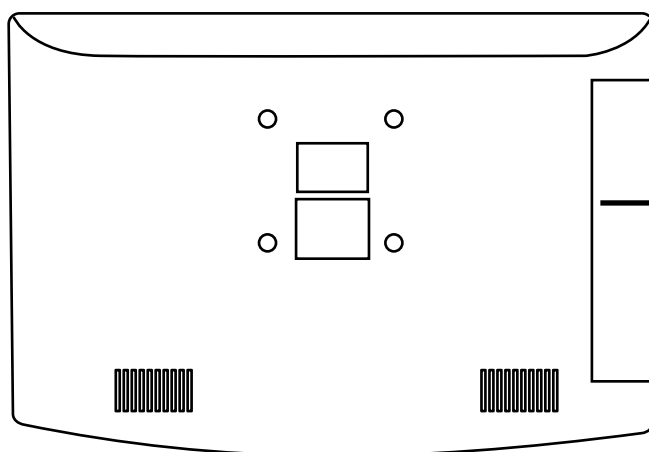


Connections
See next page

Wall Mounting

The TV is provided with mounting holes for a VESA approved wallmounting bracket (NOT SUPPLIED). Remove the Posi screws holding the base to the base bracket and lift the base away (do not remove the basemounting bracket). Mount the VESA bracket using 4xM4x10mm ISO metric threaded screws (not supplied). Do not use screws longer than 10mm, it will occur damage to the internal parts. Fit the wall bracket securely following the manufacturers instructions.

 Connections

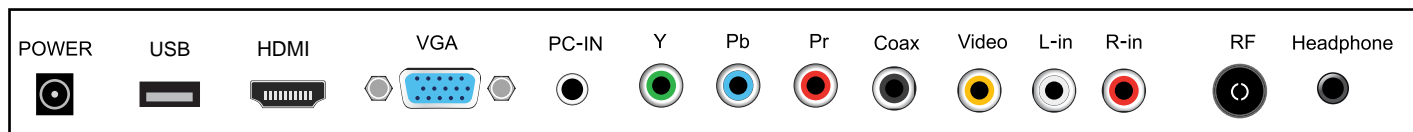

POWER: Connect to the mains adaptor.

USB: USB for PVR and media play .

HDMI: Connect it to the HDMI of DVD or other equipment.

VGA: For PC display. Connect it to the D-Sub 15 pins analog output connector of the PC.

PC-IN: Connect it to the audio output terminal of PC.

YPbPr: Connect them to the YPbPr video output terminal of DVD.(used in component source)

Coax: Digital coaxial output.

VIDEO: Connect it to video output terminal of DVD.

 
R/L in: Connect them to the audio output terminal of DVD.(shared with YPbPr)

RF: Connect antenna or cable 75 Ohm coaxial to receive TV signal.

Headphone: Connect it to your headphone or other audio equipment.

Remote Control

The remote control is using Infra-Red(IR). Point it towards the front of the LCD TV. The remote control may not work correctly if it is operated out of range or out of angle.

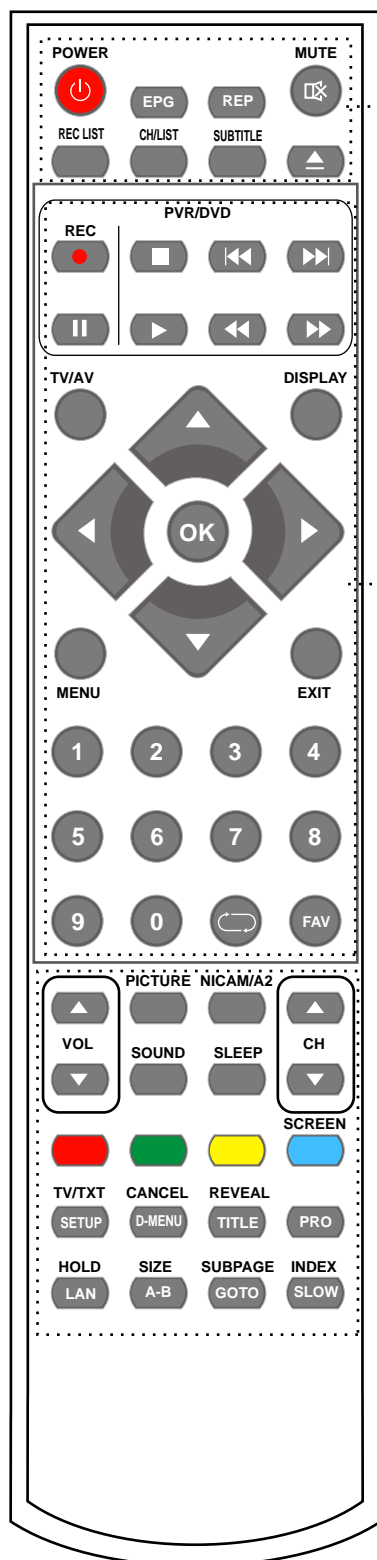

POWER: Turn the TV on/standby.

MUTE: Press to mute the sound, press again or press VOL+ to unmute.

REC LIST: Record List.

CH/LIST: Display the programs list.

SUBTITLE: Turn on/off the subtitle display in DTV mode and DVD mode.

EPG: To show the Electronic Program Guide during no-menu state only in DTV mode.

REP: Repeat playing the title or chapter.

▲ : Load/eject DVD disc.

PVR/DVD function

REC ● : Press to start record the program in DVB mode.

■ : Stop program.

◀◀ : Previous chapter.

▶▶ : Next chapter.

|| : Pause program.

▶ : Play program.

◀◀ : Fast reverse.

▶▶ : Fast forward.

TV/AV: Press to display the input source menu.

DISPLAY: Press to display the current mode's information.

MENU: System setup menu.

EXIT: Exit the OSD menu.

FAV: Display the favorite program list.

NUMBER BUTTONS

Press 0-9 to select a TV channel directly when you are watching TV.

 


Return to the previous channel viewed.

CURSOR KEYS (▲/▼/◀/▶/OK)

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

Remote Control

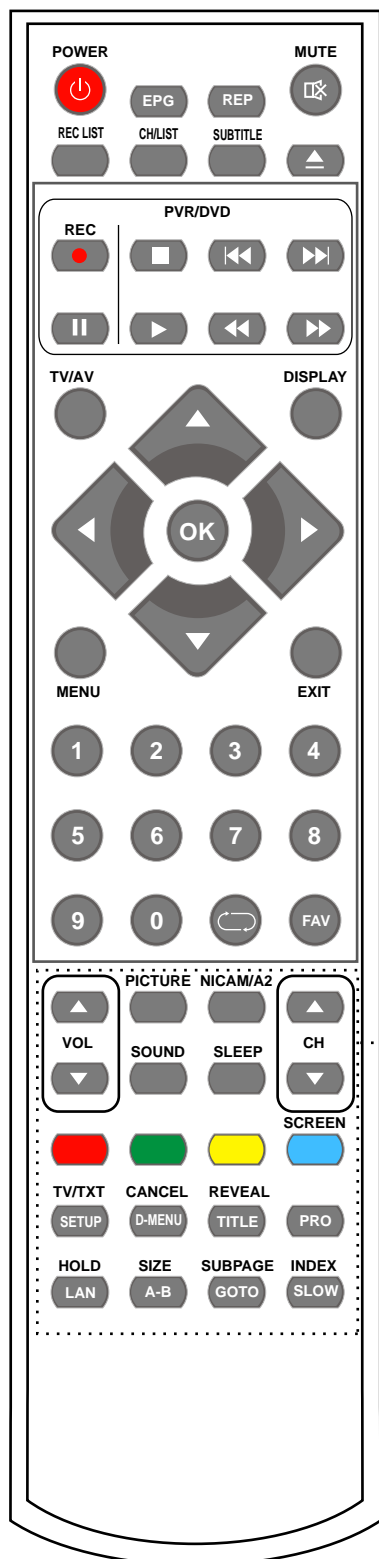

CH▲/▼: Scan through channels.

VOL▲/▼: Adjust the volume.

PICTURE: Select the picture mode.

NICAM/A2: TV Nicam/A2 select.

SOUND: Select the sound mode.

SLEEP: Standby timer.

SCREEN: Turn on/off the screen.

TV/TXT: Turn off/on the Teletext display.

CANCEL: Cancel the Teletext display.

REVEAL: Reveal any hidden text.

HOLD: Hold or carry on the current subpage.

SIZE: Press to see top half of page double size,
Press again to see the bottom

half of page double size. Press again for normal size.

SUBPAGE: Press to enter subpages, press again to cancel.

INDEX: Go to index.

SETUP: DVD system setup.

D-MENU: DVD play list/Disc menu.

TITLE: DVD title.

PRO: Edit the program and play.

LAN: Select DVD disc language.

A-B: Select and play the preferable paragraph of DVD program
by pressing this key twice at the beginning and end of it.

GOTO: Play your favorite title/chapter/track.

SLOW: Play DVD programs at slow speed.

Colour buttons: Short cuts-follow the coloured links in the text

Basic Operation

Power on/off

1. Connect to the power supply with the power cord and an adaptor.

2. -To turn on the TV

Press **POWER** button on the TV or remote control.

-To turn off the TV

Press **POWER** button on the TV or remote control.

Input Source select

 
Press **TV/AV** button on the TV set or remote control to display input source menu, and use **CH+/-** button on the TV set or **^/v** button on remote control to select the input source, press **OK** button on the remote control to enter.

Note: Before you select the input source, make sure the connections are prepared.

Input Source
DTV
ATV
YPBPR
DVD
PC
HDMI
AV
USB
<div> <div>Move</div> <div>Select</div> <div>Quit</div> </div>

Basic OSD Menu operation

Press **MENU** button to display the OSD menu as below:

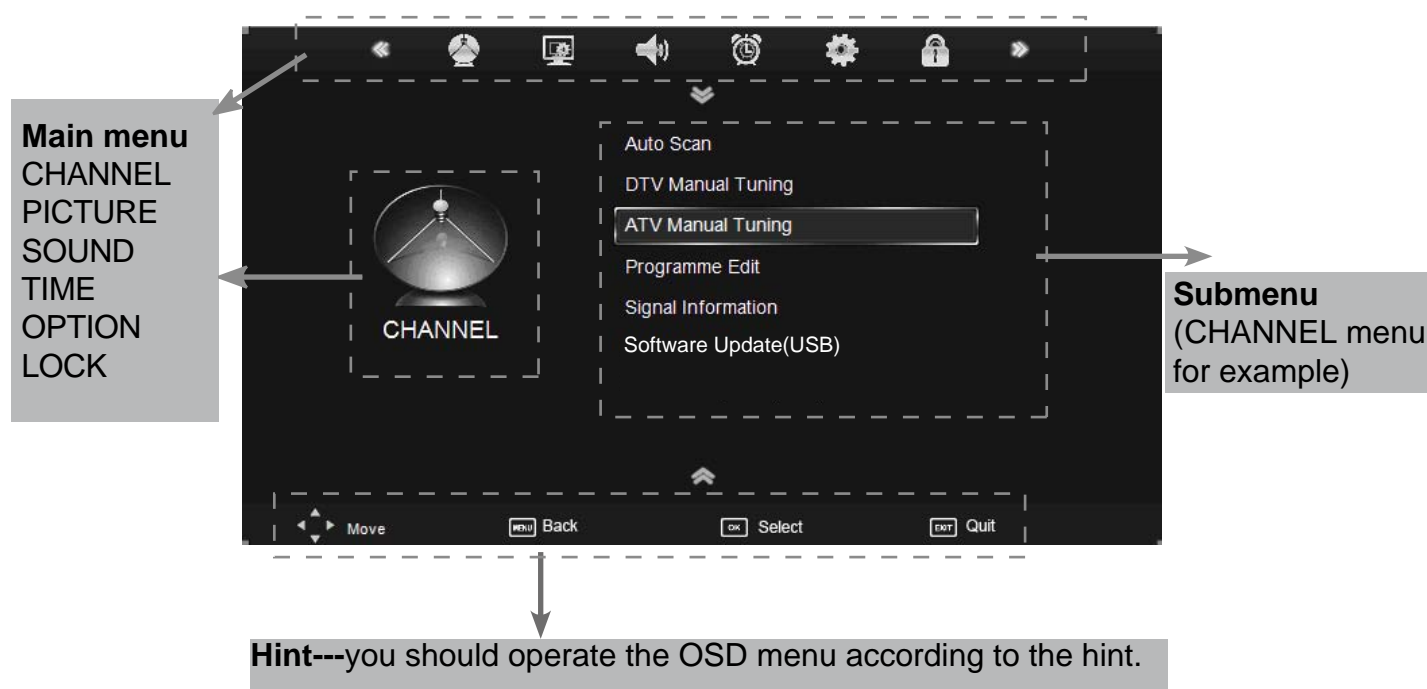

Use **</>** button to select the main menu, and press **v** button to enter the submenu.

In the submenu, use **^/v** button to select the function item, press **</>** button to adjust/setup, or press **OK** button to enter the submenu.

* (Press **MENU** button to return to the upper menu.)

* (Press **EXIT** button to exit the menu display.)

Note1: Only when you input the suitable signal, the relevant items can be activated

Note2: Please operating the OSD menu according to hint on the bottom of the banner.

OSD Menu

 
1. CHANNEL menu



Description


Auto Scan

Press **OK** button to enter the hint menu, and select the Country and Tune Type mode for the TV, then press **OK** button to start auto tuning.

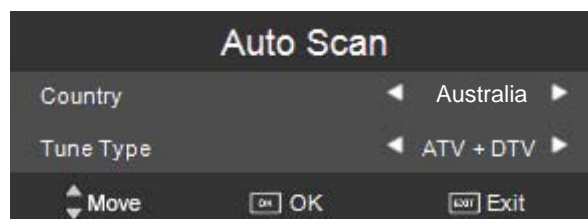

DTV Manual Tuning

 Press **OK** button to enter the DTV Manual Tuning menu, select a DTV channel, and press **OK** button to start searching.

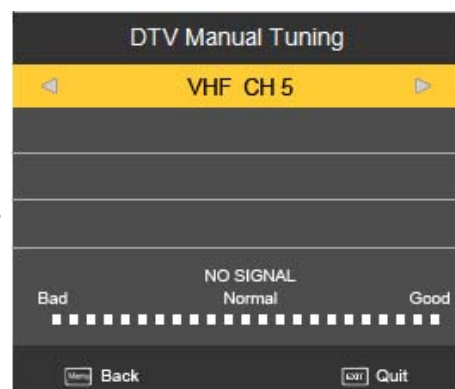

ATV Manual Tuning

Press **OK** button to enter the ATV Manual Tuning menu.

Storage To: Select a position for storing the program.

System: Select a TV system for searching.

 
Current CH: Select the channel you want to manual tuning.

Search: Press < / > button to manual search.

Fine-Tune: Press < / > button to fine-tune.

Frequency: Display the current frequency.


*Note: Press **RED** button to save all the setups you have changed.*

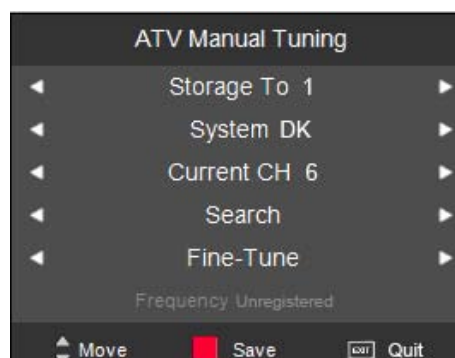

OSD Menu

Programme Edit

 Press **OK** button to enter the Program Edit menu as the following picture.

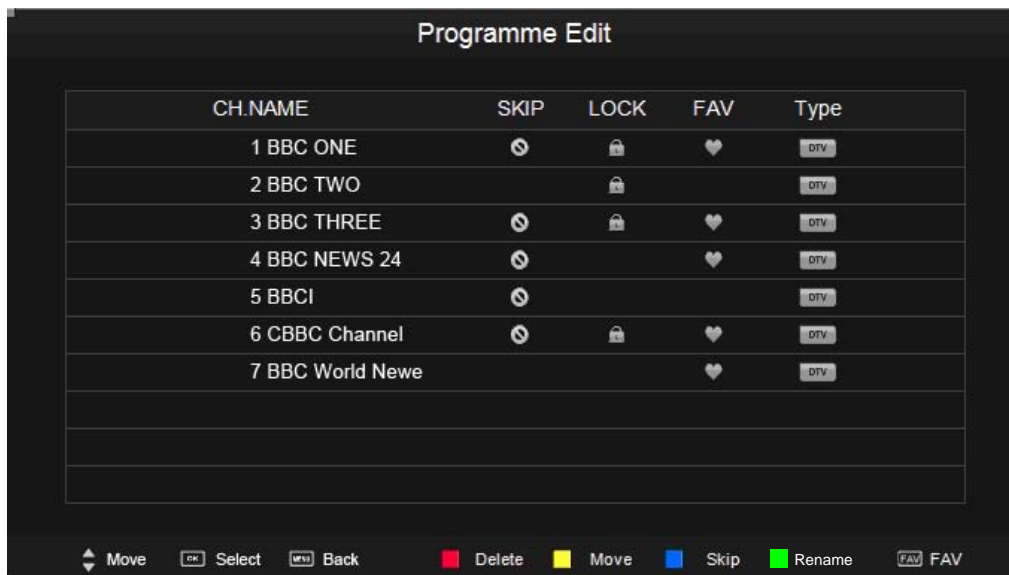

Delete: Select a channel and press **RED** button, “Delete” will appear on the right of the program edit menu next to the channel you have chosen, then press **RED** button again, the program will be deleted. However if you decide not to continue to delete press the menu button to quit.

Move: Select an channel, and press **YELLOW** button, then you can use \wedge and \vee buttons to change the position of the program, press **YELLOW** again to confirm the change. Press menu to exit and it will automatically save the current set.

Skip: Select a channel and press the **BLUE** button to label the channel, as long as the channel has a skip label it will be skipped when searching through the channels with the CH+/- buttons.

Rename: Select an **ATV** channel and press the **GREEN** button to change the name of the channel by \wedge \vee $<$ $>$ buttons

FAV: Select a program, press **FAV** button to set or delete the program as the favorite channel.

Signal Information

Display the signal information in DTV mode.

 
Software Update(USB)

Please remove the antenna wire from TV RF port, go to channel manual, select software update (USB) and press OK to run the software update.

Once the software update finish, you need to turn off the TV and turn on the TV again.

OSD Menu

2. PICTURE menu

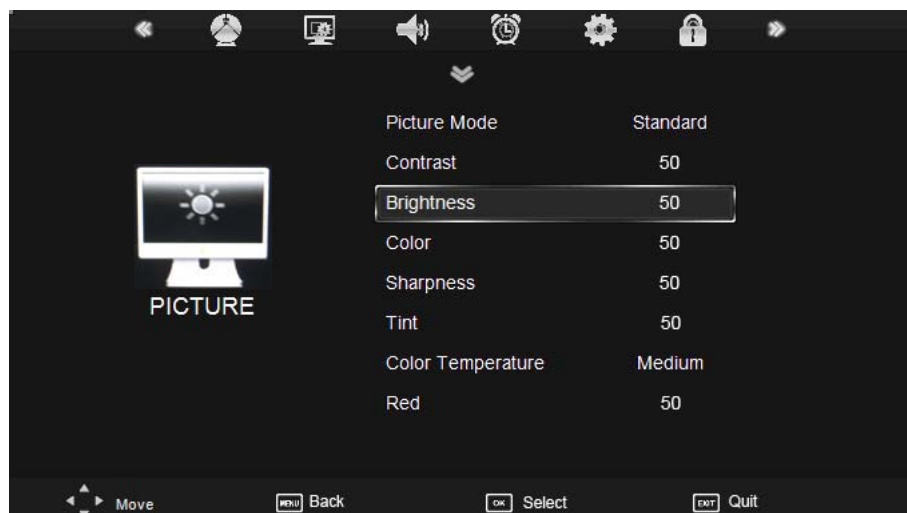

Description

Picture Mode: Choose from Standard, Dynamic, User and Mild.

Note: *Contrast, Brightness, Color and sharpness are only available and can be adjusted in the User mode option in the Picture Mode Settings.*

Contrast: Controls the difference between the brightest and darkest regions of the picture.

Brightness: Controls the overall brightness of the picture.

Color: Control the color.

Sharpness: Increase this setting to see crisp edges in the picture; decrease it for soft edges.

Tint: Controls the tint (NTSC mode only).

Color Temperature: Choose from Medium, Cool, User and Warm.

Note: *Red, Green and Blue are only available in PC, VGA mode when in Colour Temperature Mode.*

Red: Controls the red colour of the picture.

Green: Controls the green colour of the picture.

Blue: Controls the blue colour of the picture.

Aspect Ratio: Choose from 4:3, 16:9, Zoom1, Zoom2, Just Scan and Panorama.

 
Note: *The aspect ratio modes you can select according to the input source.*

Noise Reduction: Choose interference noise modes from Off, Low, Middle, High and Default.

Screen(PC mode only): Press **OK** button to enter the submenu to adjust Horizontal / Vertical position, Size or Phase of the picture.

OSD Menu

3. SOUND menu

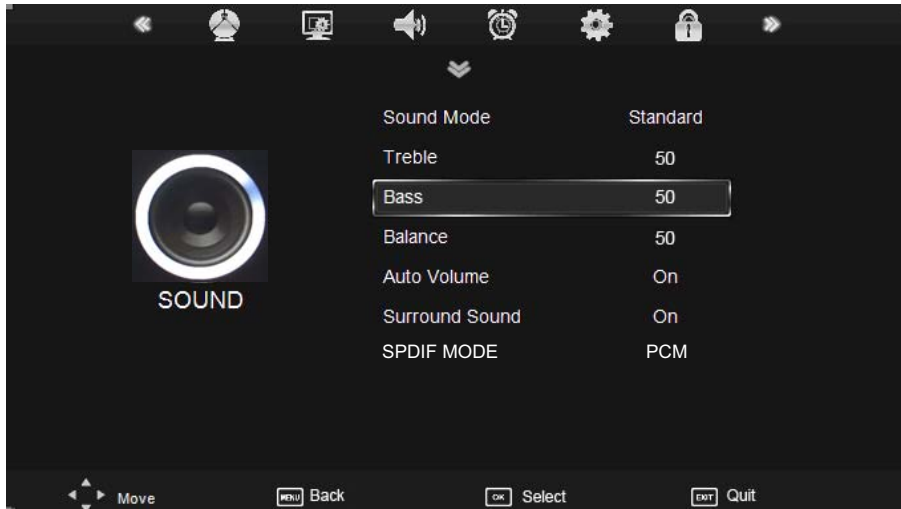

Description

Sound Mode: Allows you to select among: Standard, Music, Movie, Sports and User.

Treble(Could be adjusted when the sound mode is User): Controls the relative intensity of higher pitched sounds.

Bass (Can be adjusted when the sound mode is set to User): Controls the relative intensity of lower pitched sounds.

Balance: To adjust the balance of the left and right sound track, or turn off the volume of the left and right sound track.

 
Auto Volume: Control the volume of the program automatically when you turn on the function by selecting “On”.

Surround Sound: Turn on/off the surround sound function by selecting “off”/“surround”.

SPDIF MODE: Allows you to select among: Off, PCM and Auto.

OSD Menu

4. TIME menu

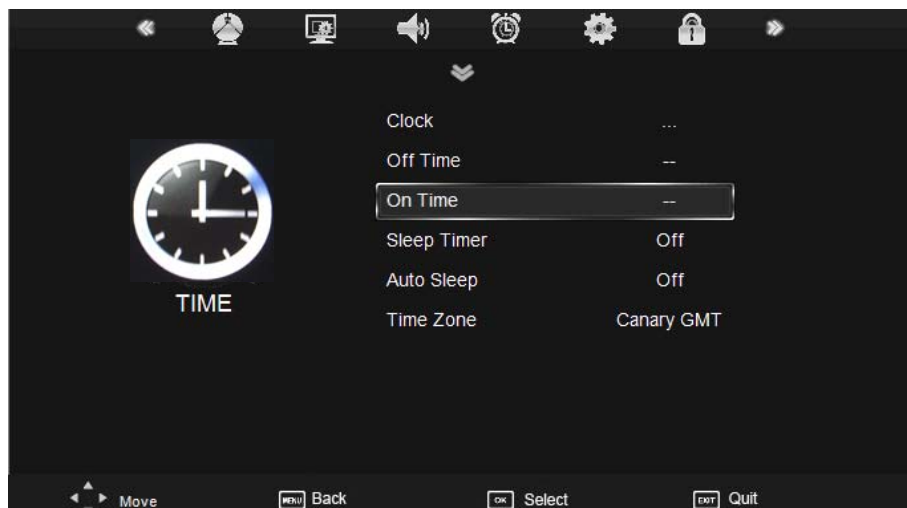

Description

Clock: Use the < and > buttons to select the position, and use the ∨ and ∧ buttons to set the time.

Note: *User can not change time manually during DTV mode, for time is from signal source directly.*

Off Time: Press **OK** button to enter the submenu, you could set the time when the TV set will be turned off automatically, you could also set the frequency.

On Time: Press **OK** button to enter the submenu, you could set the time when the TV set will be turned on automatically, you could also set the frequency, volume and program.

Sleep Timer: Allows you to setup the sleep timer among: 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min and off.

Auto Sleep: Turn on/off the auto standby function.

Time Zone: Allows you to select the time zone.

OSD Menu

5. OPTION menu



Description

OSD Language: Allows you to select menu language.

Audio Language 1st/2nd (can be selected in DTV mode): Allows you to select first and second audio language.

Subtitle Language 1st/2nd (can be selected in DTV mode): Allows you to select first and second subtitle language.

Menu Auto Closed Time: Allows you to setup the time of the menu display on the screen among: 5s, 10s, 15s, 20s, 25s, 30s, 35s, 40s.

Country: Display the current Country, and you should select the Country when you want to auto tuning.

Restore Factory Default: Press **OK** button to restore factory default.

OSD Menu

6. LOCK menu



Description

Lock System: Turn on/off the Lock System function.
Note: You should enter the code to operate the menu.(original code is 0000)

Set Password: Set pin code. If the Pin code has been changed you must enter the present code.
New : Enter the new password.
Confirm: Enter the new password.

Block Program: Lock the channel, you have to enter the code to view the channel. Use **^** and **v** buttons to select the channel, and press the **GREEN** button on the remote control to lock the channel or cancel.

 


Parental Guidance: Allows you to select the Parental Guidance mode.


Multimedia Operation

Basic Operation

1). Press the TV/AV button on the remote control to display the input source menu, select USB source by the ◀ / ▶ buttons, and press OK button to enter the Multimedia menu seen below.

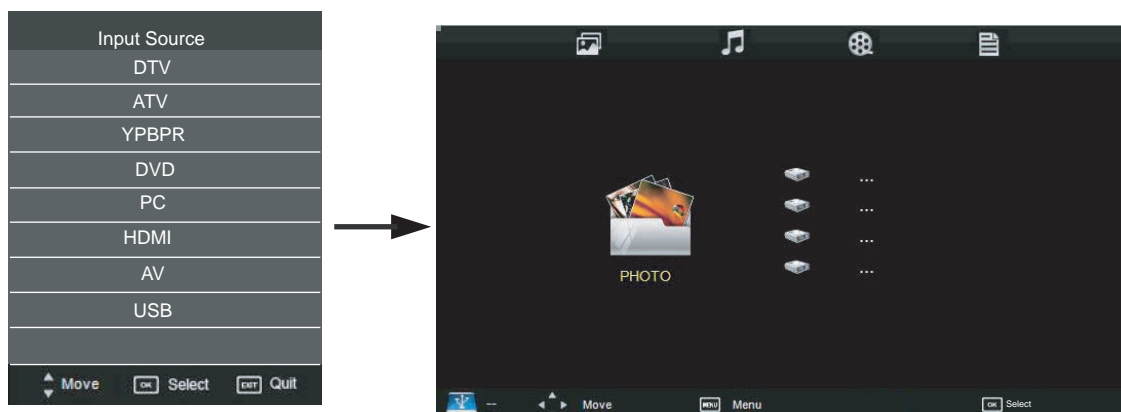

 2). Insert USB device, you will find the name of the device display on the screen.

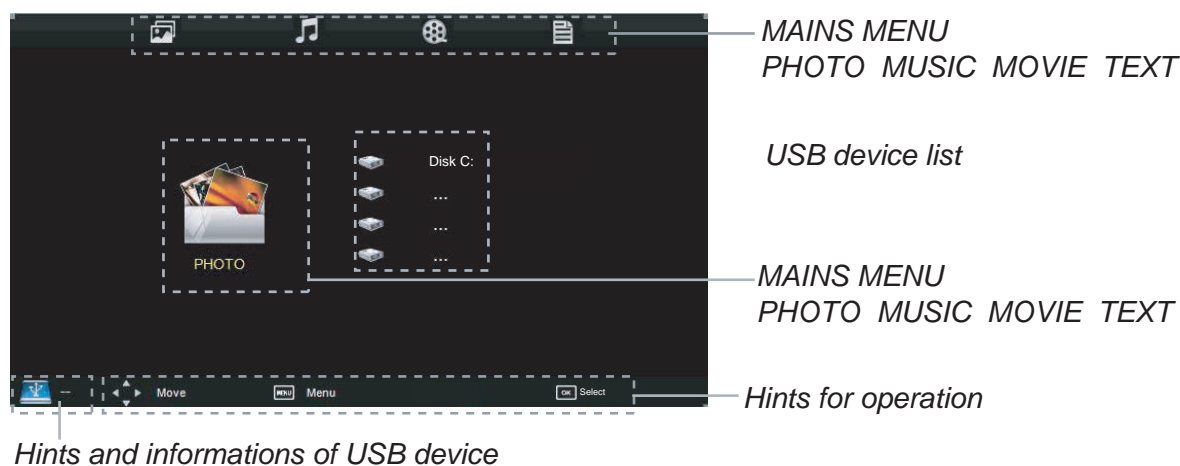

3). Press ◀ / ▶ button to select the kind of the files in the device you want to program from PHOTO, MUSIC, MOVIE and TEXT. Press ▲ / ▼ button to select the device and press OK button to enter.



Press ◀ / ▶ / ▲ / ▼ buttons to move, and press OK button to select the file or unfold the folder, Then press ▶ button to program the files (be signed) you select or the files in the fold you select, You can display the option table on the bottom of the screen by OK button, press ■ button to hide. Press ■ button to stop and exit the full screen program.

Multimedia Operation

1. Photo

Play the photo



Press ◀/▶ button to select the option on the table, and press **OK** button to change.

- Repeat:** Select the repeat mode from Repeat All, Repeat 1, Repeat None.
- Music:** Play/pause the music program (you can only play or pause the music you have programed).
- Playlist:** Display the playlist on the screen, and you can select the photo by ▼/▲ button, and press **OK** button to program. Press ◀/▶ button to return to the options table.
- Info:** Display the information of the photo.
- Rotate:** Rotate the photo clockwise/counterclockwise.
- Zoom Out/In:** Zoom out/in the photo.
- Move View:** Move the photo in Zoom in mode.

2. Music

Play the music



Press ◀/▶ button to select the option on the table, and press **OK** button to change.
Press ▼/▲ button to select the music, and press **OK** button to program.

- Repeat:** Select the repeat mode from Repeat All, Repeat 1, Repeat None.
- Goto Time:** Program the music form the time you set.
Press **OK** button to display the time table, and select the position by ◀/▶ / ▼/ ▲ button, set the time by the number buttons, select “OK” and press OK button to search.
- Screen Mute:** Press **BLUE** button to enter the Screen Saver mode, press again to exit.

Multimedia Operation

3. Movie

MOVIE	MPEG4	AVI	The maximum bit rate:6Mbps The maximum display resolution is 720*576p
		MP4	
		DIVX4,DIVX5,XVID	
	MPEG1/2	MPG	The maximum bit rate:9.8Mbps
		MPE	
		VOB	
		DAT	
		TRP	
		TS	

Play the movie



Press ◀/▶ button to select the option on the table, and press **OK** button to change.

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

Set A-B: Select and play the preferable paragraph of the program by setting A and B at the beginning and end, and there will be a sign on the left screen, press **OK** button again to cancel.

Playlist: Display the playlist on the screen.

Info: Display the information of the movie.

Slow: Play the programs at slow speed, press ▶ (Play) button to cancel.

Step: Step the programs by **OK** button, press ▶ (Play) button to cancel.

Goto timer: Program the movie from the time you set.

 
Zoom out/in: Zoom out/in the movie screen.

Aspect Ratio: Select the aspect ratio of the screen display.

Move View: Move the photo in Zoom in mode.

4. Text

Play the text

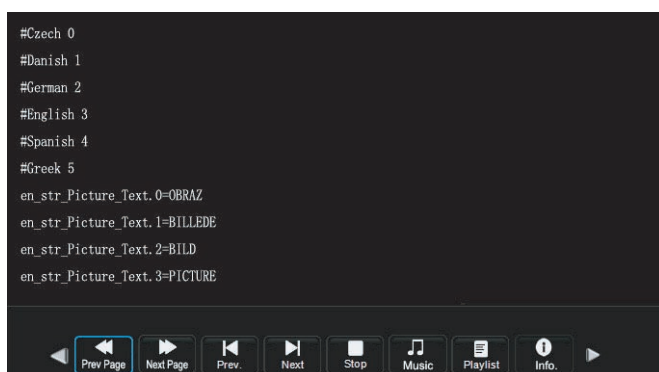

Press ◀/▶ button to select the option on the table, and press **OK** button to change.

Prev/Next page: Turn to previous/next page of the text.

Prev./Next: Turn to previous/next file.

Stop: Stop auto turning pages.

Music: Play/pause the music program.

Playlist: Display the playlist on the screen.

Info: Display the information of the text.

Recording Operation

PVR function can only record digital TV channels, analogue channels can not be recorded via USB through PVR function.

The USB port for PVR function supports most of USB 2.0 Flash Memory Stick Drive and USB 2.0 External Hard Disk Drive up to 400GB storage space. (Hard disk with storage size more than 400GB is not supported).

Please kindly note the PVR function via USB can support most brands portable USB device however it may not be compatible with some brands portable USB device.

PVR settings

Press the MENU button, and select CHANNEL menu.



1). Recorded List

 


Recorded list: Display the Recorder List menu.

INFO: Display the information of the program you recorded.

RED button: Delete the program you select.

2). Recording Timer

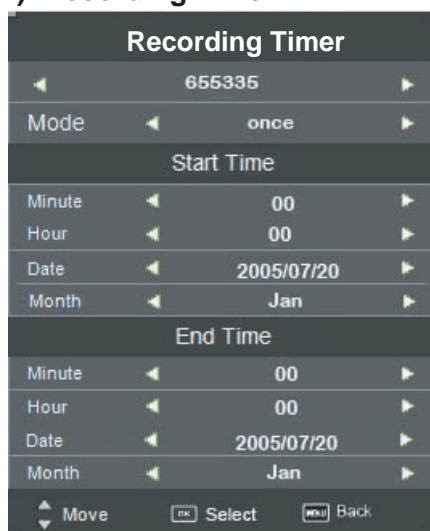

Set the Recording Timer

The TV will record the program automatically according to your settings.

TITLE: Display the name of the recording program.

MODE: Select the record mode.

Start Time: Set the start recording time.

End Time: Set the end recording time.

Press **OK** button to save the setting and exit the menu.

Recording Operation

3). Schedule List

Schedule List					
Mode	Time	Date	Programme Title	Channel Name	Result
	---	---	---	---	
	---	---	---	---	
	---	---	---	---	
	---	---	---	---	
	---	---	---	---	
	---	---	---	---	
	---	---	---	---	

MOVE Delete Back Quit

Display the recorder shedule

Note: a. Could't add shedules which have existent on the list;

b. Could't add shedules when the list is full, you have to delete some schedules;

c. You could delete a schedules by RED button on the remote control.

4). PVR File System

PVR File System		
Select Disk	--	
Check PVR File System	--	
USB Disk	--	
Format	--	
Time Shift Size	--	
Speed	--	--

Move Select Back

Setup the PVR File system before you start recording.

Select Disk: Select the device for the Record files.

Check PVR File System

USB Disk: Display the USB state.

Format: Format the USB device for PVR operating.

Time Shift Size: Display the size of the USB device (The device has been formatted).

Speed: Display the speed of the USB device (The device has been formatted).

Recording Operation

5) Record Start

When you finish the settings above, you could start recording by select **Start Recording** in the menu and press OK button in DTV mode. (You can also start recording by press the **REC** ● button on the remote control)

Record buttons

- **REC(Recording)**:Press to enter the recording mode.
- II PAUSE**: Press to enter the timeshift mode.
- Recording list**: Press to display the recording list.
- **Stop**: Press to stop recording.

Recording menu

When you press **REC** button, the screen will display the recording menu as below:



- Note:
- a. You could change the mode of Recording menu by REC/Exit button.
 - b. Press STOP button to exit the recording mode.
 - c. Press PLAY button to play the program you are recording from the beginning.
 - d. Press Recording list button to display the Recorder list, and you could play the program you selected. The recording will be going on, and the Recording menu will display when you exit the Recorder list.

Timeshift

Press PAUSE button to enter the Timeshift mode, and the picture will be paused, the recording will begin.

- Note:
- a. You could change the mode of Timeshift menu by **REC**/Exit button.
 - b. Press STOP button to exit the Timeshift mode.
 - c. Press PLAY button to play the program you are recording from the beginning.

Playback



DVD Operation

DVD Basic Operation


Turn on your TV then use the TV/AV button on the remote control or on the TV to select DVD mode.

Place a disc

Insert a disc according to the silk.

Do not touch the playing surface.

Hold the disc around the outside with your fingers and place the disc into the slot. The player will automatically draw the disc into the player.

To "Eject" the disc, press the "  " (EJECT) button on the remote control or on the TV.

Play

The contents of each disc vary, as to how the disc was authored and what features are included. Some discs start playing as soon as they have been read, some need "Play" selecting in the Menu. Different play modes are offered, such as Menu Play, Sequence Play and other modes.

Using the Display Feature

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc discs.
2. Loading and playing DVDs (two pages)
 - Press DISPLAY button once to show the first page:
 - "Disc Type, Title * / * (the playing title / total titles), Chapter * / * (the playing chapter / total chapters), Elapsed Time of the Disc".
 - Press the button again to show the second page:
 - "Language * / * (the serial number of playing language / the amount of optional languages) or Off, Language Type, Audio Type, Subtitle * / * (the serial number of playing subtitle / the amount of optional subtitles) or Off, Angle * / * (the serial number of playing angle / the amount of optional angles) or Off".
 - Press the button for the third time, the display menu fades out.
3. Loading and playing SVCD discs (two pages)
 - Press Display button once to show the first page:
 - "Disc Type, Track * / * (the playing track / total tracks), Mute, PBC, Repeat Mode, Elapsed Time of the Playing Track".
 - Press the button again to show the second page:
 - "Language * / * (the serial number of playing language / the amount of optional languages) or Off, Language Type, Audio Type, Subtitle * / * (the serial number of playing subtitle / the amount of optional subtitles) or Off".
 - Press the button for the third time, the display menu fades out.
4. Loading and playing VCD
 - Press Display button once to show the first page:
 - "Disc Type, Track * / * (the playing track / total tracks), Mute, PBC, Repeat Mode, Elapsed Time of the Playing Track".
 - Press the button again, the display menu fades out.
5. Loading and playing CD, HD-CD, WMA, Digital Audio / JPEG discs
 - Press Display button once to show the first page:
 - "Disc Type, Track * / * (the playing track / total tracks), Mute, Repeat Mode, Elapsed Time of the Playing Track".
 - Press the button again, the display menu fades out.

DVD Operation

Subtitles

1. Compatible with DVD, SVCD discs.
2. Press the Subtitle button on the remote once, and the subtitle info banner appears
3. When a DVD or SVCD is recorded with subtitles, you can use the Subtitle feature to view the subtitles on-screen. By default, subtitles are off. The info banner will display Subtitle Off.
4. To display subtitles, press the Subtitle button again. The default language with its responding serial number will be displayed in the info banner and subtitles will be displayed in that language. There are 8 supported subtitles: Chinese, English, Japanese, French, Spanish, Portuguese, Germany and Latin. With each consecutive press of the Subtitle button, the subtitle switches. For example, "Language Icon: [1 English DTS 6CH] or [Off]" (the availability of the subtitles are disc-dependent). To turn subtitles off, press the Subtitle button until Subtitle Off is displayed.

Zoom In the Video Image

1. Compatible with DVD, SVCD, VCD, JPEG discs.
2. The Zoom Function allows you to enlarge the video image.
3. Press Zoom repeatedly to activate the function and choose the required zoom factor: Zoom 2, Zoom 3, Zoom 4, Zoom 1/2, Zoom 1/3, Zoom 1/4, Zoom Off.

Digital Audio Disc

1. Compatible with Digital Audio discs
2. The player will search the disc directory automatically and display the contents on screen.
3. The player will then start to play the first track, of the selected directory.
4. To change directories use the direction buttons.

Disc Care

About Disc Terms

Title

Generally, pictures or music compressed on a DVD are divided into several sections, "title".

Chapter

The smaller section unit of picture or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching, but some discs may not have a recording chapter.

Track

A segment of picture or music on a CD, Each track is numbered for searching.

Care of Disc

Video disc contains high-density compressed data that needs proper handling.

1. Hold the disc with fingers by outer edge and/or the center spindle hole. Do not touch the discs surface.
2. Do not bend or press the disc.
3. Do not expose the disc to direct sunlight or heating sources, Store discs in cabinet vertically, and in dry condition.

Prevent exposure to:

Direct sunlight, Heat or exhaust from a heating device, Extreme humidity

Clean the disc surface with a soft, dry cleaning cloth, Wipe the disc surface gently and radially from center toward the outer edge.

Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.



 
DVD Operation

DVD System Setup

System operation will define the setting of the set; these definitions will be stored until you change them again.

General Steps of Setup Menu

1. Pause or Stop the player. Press **SETUP** on the remote control. The main menu will be shown as below.

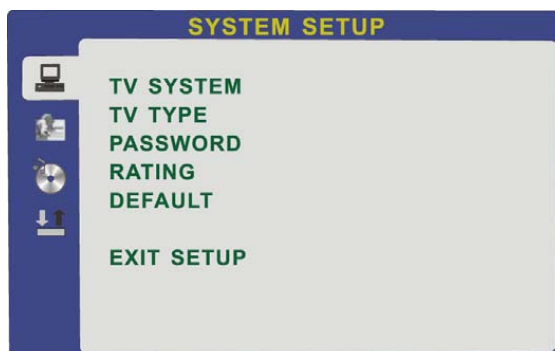


2. Press the \wedge / \vee button to select the Icon of the desired section, e.g. "TV System" and press $\>$ button to open that section.
3. Press \wedge / \vee to select the desired feature and again press $\>$ button to open that section.
4. Press \wedge / \vee to select the desired feature and then press "OK" to select the new setting.
- 5 To exit the menu, press "SETUP " or \vee button to select EXIT SETUP and then press "OK" When launching the setup routine, the pressing of the following buttons will turn off the setup menu, while the choices that have been changed will be saved.

Menu specification

1. SYSTEM SETUP

 The system setup options are illustrated below:

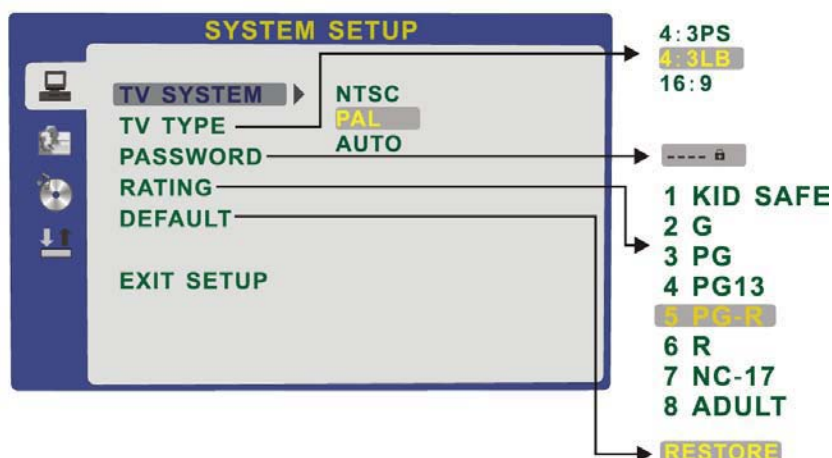

TV SYSTEM

According to the Color system of your TV, select proper TV TYPE.

PASSWORD

The password option is initialized as locked. You cannot set the ratings limit or change the password. To enable these features you must unlock the Password. The default password is

DVD Operation

"0000". Using the \wedge / \vee button, move the highlight to "PASSWORD", press \triangleright the button and enter "0000". You will see the padlock symbol open. You may now change the RATING or put in a new password number. If the Lock symbol is BLUE you must press \triangleright the button to enter the lock field, the lock symbol will change to YELLOW, you may now enter a new 4 digit number. Please remember or write down the new Password and keep safe.

 
RATING

The Rating feature is a rating limit feature, like movie ratings. This helps you to control what DVD the family watches. There are 8 levels of selection, from KIDS SAFE to ADULT. Adult is the "play all" selection.

2. LANGUAGE SETUP

The language setup options are illustrated below:

- **OSD LANGUAGE:** The OSD will display in the language you choose.
- **AUDIO LANG:** If the disc you are playing has the language you choose, it will output audio in that language.
- **SUBTITLE LANG:** If the disc you are playing has the language you require you may select this either in the Menu or using the "SUBTITLE" button on the Remote control. You may also switch this OFF.
- **MENU LANG:** If the disc you are playing has the language you require you may select this.

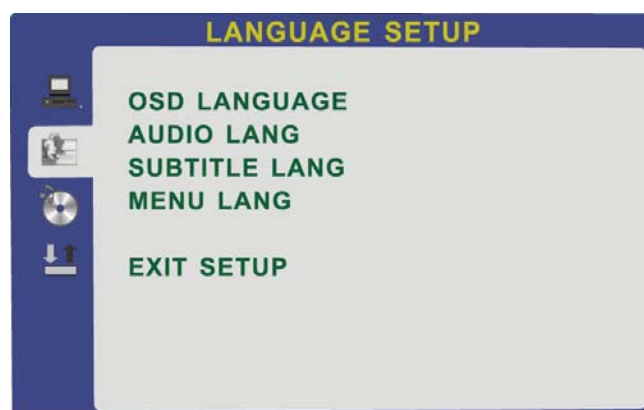

3. AUDIO SETUP

 
- **TONE:** Use the \wedge / \vee button to move the scroll and adjust the tone.



4. DIGITAL SETUP

The video setup options are illustrated below:

- **DYNAMIC RANGE:** Use the \wedge / \vee button to move the scroll and adjust the dynamic range.
- **DUAL MONO:** Choose the mode of the audio output. There are four modes: STEREO, MONO L, MONO R, MIX MONO.

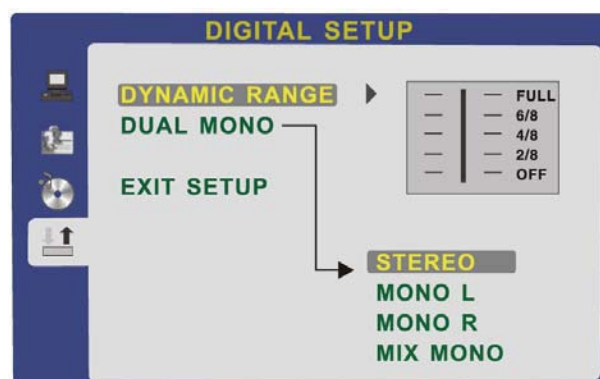

Simple Troubleshooting

If the display fails or performance dramatically deteriorates check the Display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

If the display still fails to perform as expected, connect your helpline for assistance.

No power

- Check all connections to the TV.
- Press either the power button or the Standby button on the Remote control.

No picture or sound

- Ensure that the TV is plugged in and the power is on.
- Ensure that the aerial is connected.
- Try a different programme.

Poor picture quality

- Check the aerial connections.
- Check that the channel is tuned in properly.
- Adjust the picture settings: brightness, colour, sharpness, contrast, hue.
- Make sure that the TV is not located close to electrical appliances that may emit radio frequency interference.

No colour

- Adjust the colour setting.
- Check that the programme is broadcast in colour.
- Check that the channel is tuned properly.

TV does not respond to remote control

- Check that there are no obstructions between the remote control and the unit.
- Check that the remote control is within range of the unit.
- Check that the batteries in the remote control are not weak or exhausted.

This LCD TV is for household use and registered as harmless on electromagnetic waves. Therefore, you can use it in every location as well as residential areas.

IMPORTANT NOTICE

This product composes up to 6.0 million cells and a few cell defects may occur in the manufacture of the panel. Several dead pixels (allow up to 2 bright or 2 dark pixels) on the panel are deemed acceptable by the industry standards. In line with manufacturers and would not mean that the panel is faulty. Dead pixels panels with 6 pixels or more within 12 month period , CONIA AUSTRALIA PTY LTD complies with industry standard and reserves the right to repair the unit and non-refundable. We hope you will understand that the product that corresponds to this standard is regarded as acceptable.